** Installing Leg Pieces **

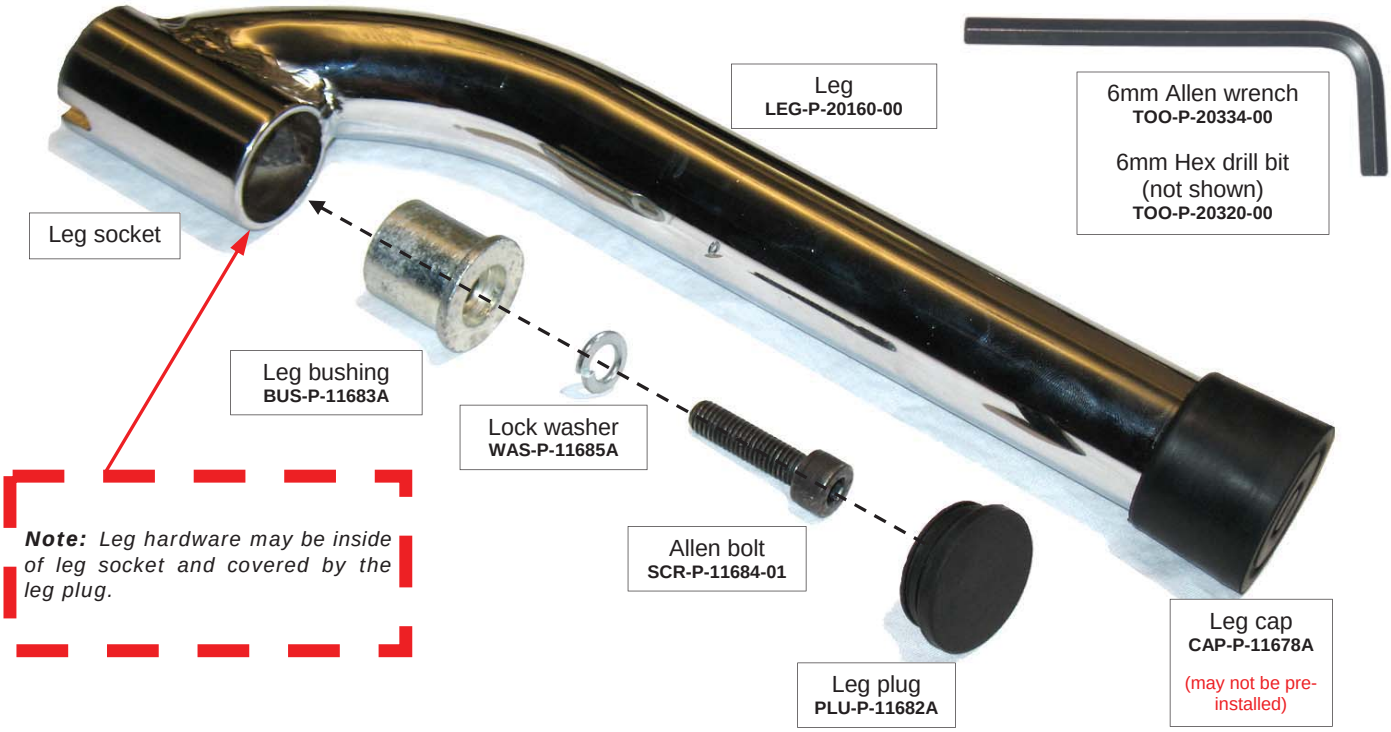

Note: *Leg hardware may be inside of leg socket and covered by the leg plug.*

1) Familiarize yourself with the leg pieces (leg and leg cap), leg hardware (leg bushing, lock washer, Allen bolt, and leg plug), and the Allen wrench/drill bit.

IMPORTANT: Be sure leg caps are installed securely over bottom of legs, as shown above.

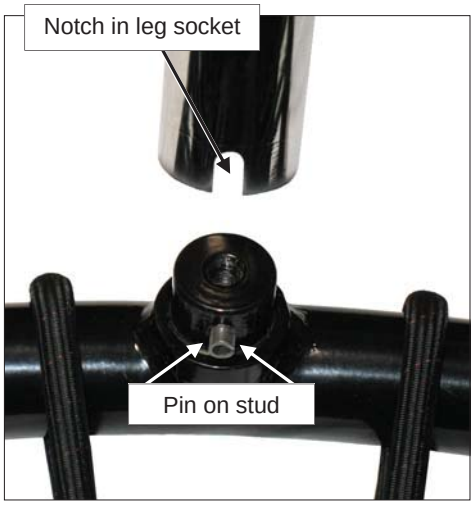

WARNING: *Periodically check all leg mounting bolts and retighten if necessary. All bolts should be tight prior to using the trampoline.*

Note: *Keep Allen wrench to remove or re-tighten legs, as needed.*

2) *If you are going to install an exercise handle, see next page for handle leg placement before installing the legs in this step.*
With trampoline upside-down, fit leg sockets over stud on trampoline frame. Notch in leg socket lines up with pin on stud. If planning to fold and store your trampoline after each use, securely tighten leg screws by hand. If you are not planning to fold and store the trampoline after each use, securely tighten leg screws with supplied 6mm Allen wrench.

The JumpSport Fitness Trampoline is now ready for use!

If you have an exercise handle bar, continue to the next page for installation instructions.