


# JumpSport®

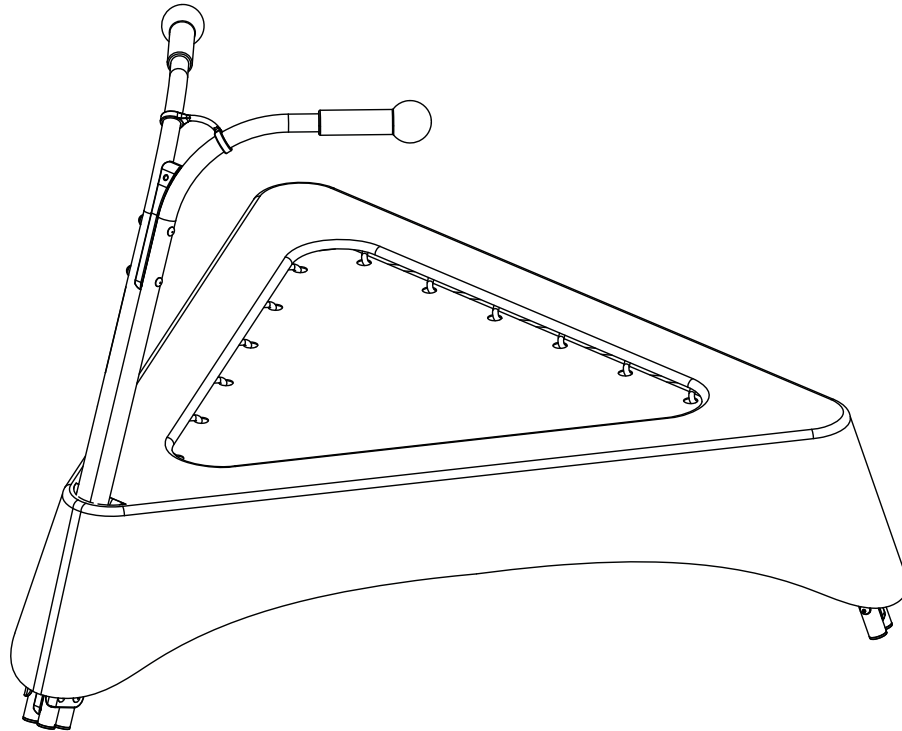

## iBounce™ Kids Trampoline Owner's Manual

Assembly, Installation, Care, Maintenance, and Use  
Instructions

### **WARNING**

**Read these materials prior to assembling and using this trampoline**



DO NOT attempt or allow somersaults. Landing on the head or neck can cause serious injury, paralysis or death, even when landing in the middle of the bed.



DO NOT allow more than one person on the trampoline. Use by more than one person at the same time can result in serious injury.

Use trampoline only with mature, knowledgeable supervision.

Retain address information for future use.

**JumpSport, Inc.**  
2055 South 7th Street, Suite A  
San Jose, CA 95112 U.S.A.

**Intended for children ages 2 and older.**  
**The maximum user weight is 75 pounds.**

**1-888-567-5867**  
**www.jumpsport.com**

This product is intended for use by children ages 2 and older, weighing less than 75 lbs.

- **⚠ WARNING:** Users should consult with a physician before beginning any exercise or conditioning program.
- If user feels faint or dizzy, or any pain or severe discomfort, immediately stop using the trampoline.
- Avoid bouncing when tired. Take breaks often.
- Users should drink water at regular intervals to remain hydrated.
- Use only in a well lit area, and only on level, cushioned surfaces (for instance, on carpeting). Only use trampoline when it is dry.
- Keep away from objects which could interfere with safe use. Remove obstructions (such as balls or toys) underneath, above, or around the trampoline. Leave adequate lateral clearance around the trampoline (avoid furniture, lamps, walls, windows, toys, other trampolines, etc.).
- Inspect trampoline before each use. Replace, tighten, or adjust any loose, worn, defective, or missing parts.
- Do not allow users to jump on and off the trampoline. Do not use the trampoline as a springboard to or from other objects. Do not step on the frame or hold onto the handle when getting on and off the trampoline. The handle is designed for use only while jumping. If a child needs assistance, the supervising adult should hold the child's hand(s) while the child gets on or off the trampoline.
- Stop bounce by flexing knees as feet come in contact with the trampoline bed. Control is more important than bounce height.
- Store and protect trampoline from unauthorized use.
- For additional information, contact us at [JumpSport.com](http://JumpSport.com) or 1-888-567-5867.

**It is the responsibility of the purchaser and of anyone who is supervising children who use this product to become familiar with all of the information in this booklet, to convey the warnings to all users, and to enforce JumpSport's rules for safe use.**

---

## Copyright Notice

This material is protected by United States copyright laws and is proprietary to JumpSport, Inc. Disclosure, reproduction, translation, modification, or use of this document by anyone other than authorized employees, authorized users, or licensees of JumpSport without the prior written consent of JumpSport, Inc. is prohibited.

The information in this document is subject to change without notice. JumpSport, Inc. shall not be liable for any damages resulting from technical errors or omissions, which may be present in this document, or from use of this document.

Copyright © 2012, by JumpSport, Inc. All rights reserved.

Printed: 2012

Instruction Manual P/N: INS-P-20488-00E

JumpSport iBounce Kids Trampoline P/N: RBJ-S-20444-01

## Trademarks

JumpSport® and iBounce™ are trademarks of JumpSport, Inc.

All other brand or product names are trademarks or registered trademarks of their respective companies or organizations.

## How to Contact Customer Support

Should you require customer service or technical support for the JumpSport Fitness Trampoline, please contact JumpSport's Customer Service department at:

1-888-567-5867

6:00am – 5:00pm Monday through Friday, Pacific Time



## Assembly and Installation Instructions

**⚠ WARNING:** Adult assembly required. Product includes small parts and sharp points in an unassembled state. Keep unassembled parts away from children under 3 years of age.


### Tools

Installation of the iBounce Kids Trampoline **requires a 5mm Allen wrench (included).**



### Parts List

Reference #	Part #	Description	Quantity
1	TOO-P-10159-00	5mm Allen wrench	1
2	TUB-A-20520-00	Frame piece	3
3	SPA-P-20470-00	Frame spacer	3
4	BOL-P-20476-00	M6 carriage bolt	13
5	NUT-P-20415-00	M6 cap nut	13
6	WAS-P-20482-00	M8 washer	13
7	HOK-P-20481-00	Bungee hook	3
8	TUB-A-20518-00	Left handle piece	1
9	TUB-A-20519-00	Right handle piece	1
10	SPA-P-20471-00	Upper handle spacer	1
11	SPA-P-20472-00	Lower handle spacer	1
12	PLA-P-20475-00	Handle plate	2
13	CAB-P-20537-00	Cable tie	6
14	MAT-P-20477-00	Mat	1
15	BUN-A-20485-00	Mat bungee	3
16	PAD-P-20508-00	Skirt	1
17	SPA-P-20637-00	Handle Cross Bar	1
18	HAN-P-20478-00	Handle Grip	2

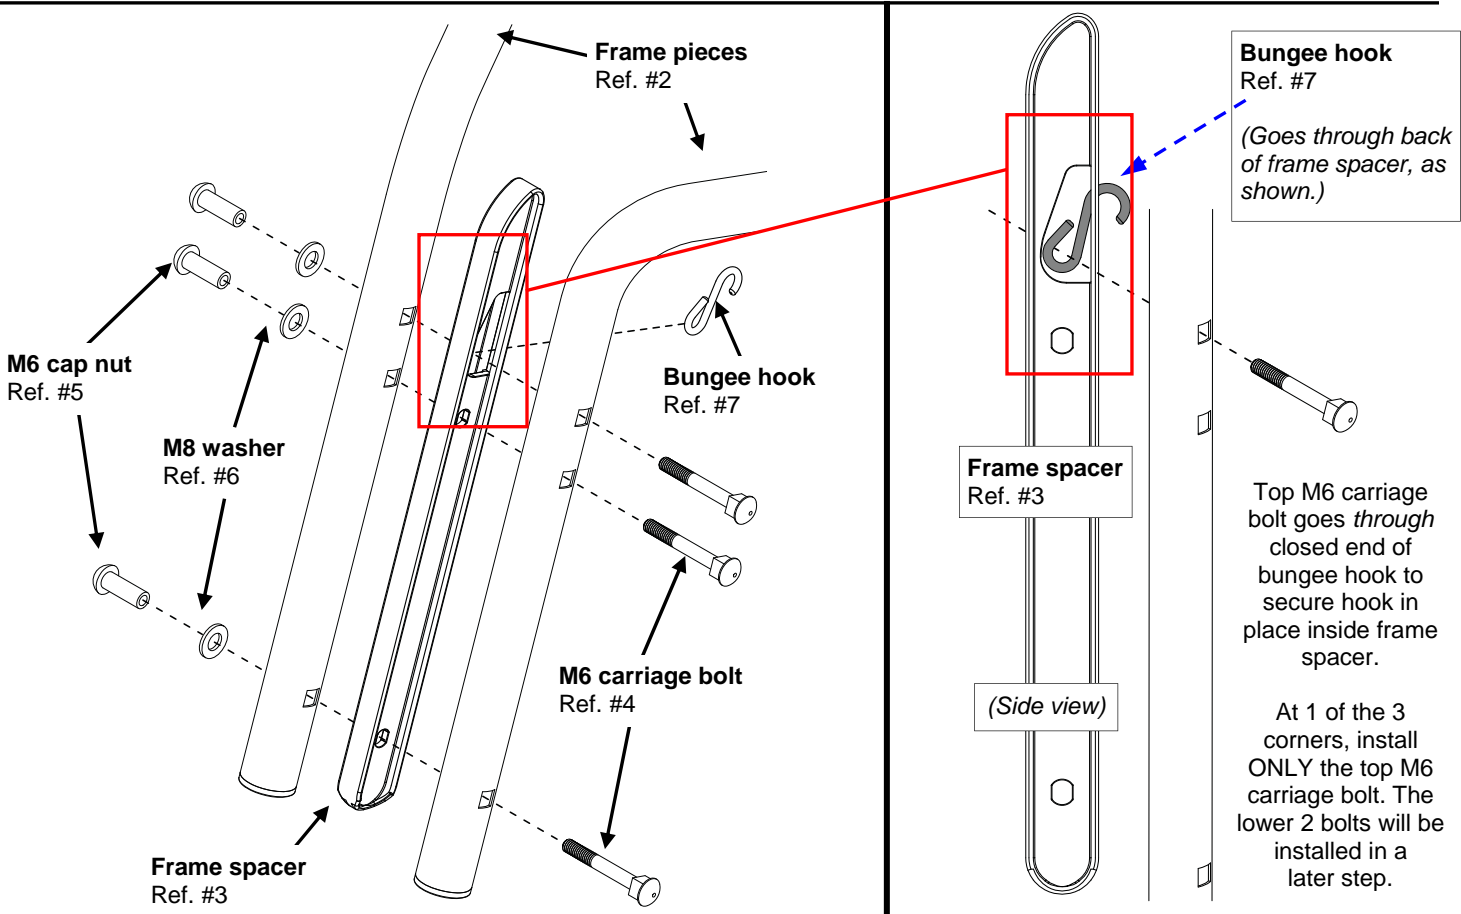


**1)** Assemble all 3 corners of the triangular frame. M6 bolts should only be hand-tight. They will be securely tightened in a later step.

**Note:** Only install the **top** bolt, cap nut, and washer on 1 of the 3 corners of the frame. For the other 2 corners, install all 3 bolts, cap nuts, and washers. (See image of completed frame on page 5, Step 3.)

## Assembly and Installation Instructions


**CAUTION**

**Avoid Injury.**  
Handle is not designed to support your entire weight. It is to aid with balance only while jumping. Do not hold onto handle while getting on or off the trampoline.

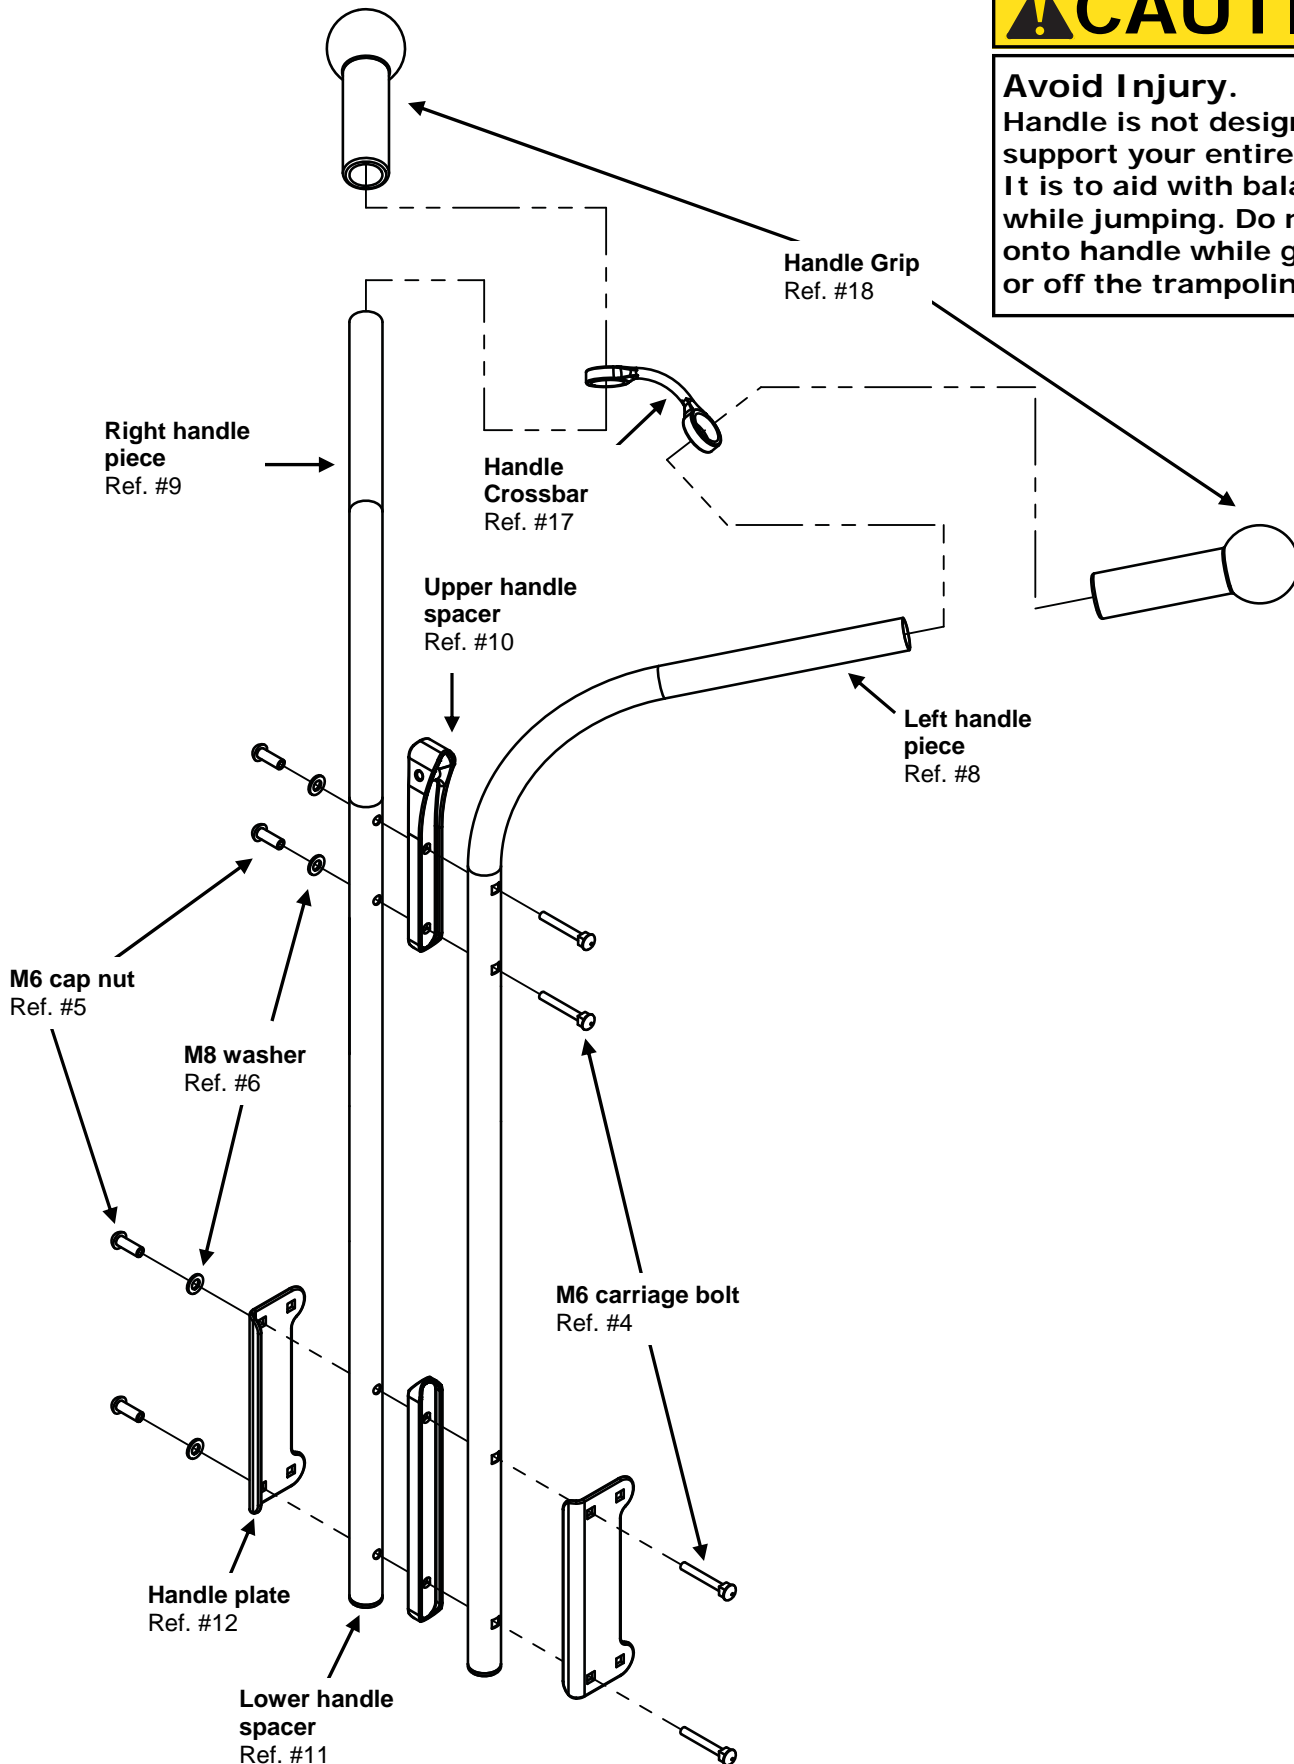


**2)** Assemble the handle, as shown, starting with the upper handle spacer. When completed, you will have a “handle assembly”.  
*M6 bolts should only be hand-tight.* They will be securely tightened in a later step.

## Assembly and Installation Instructions

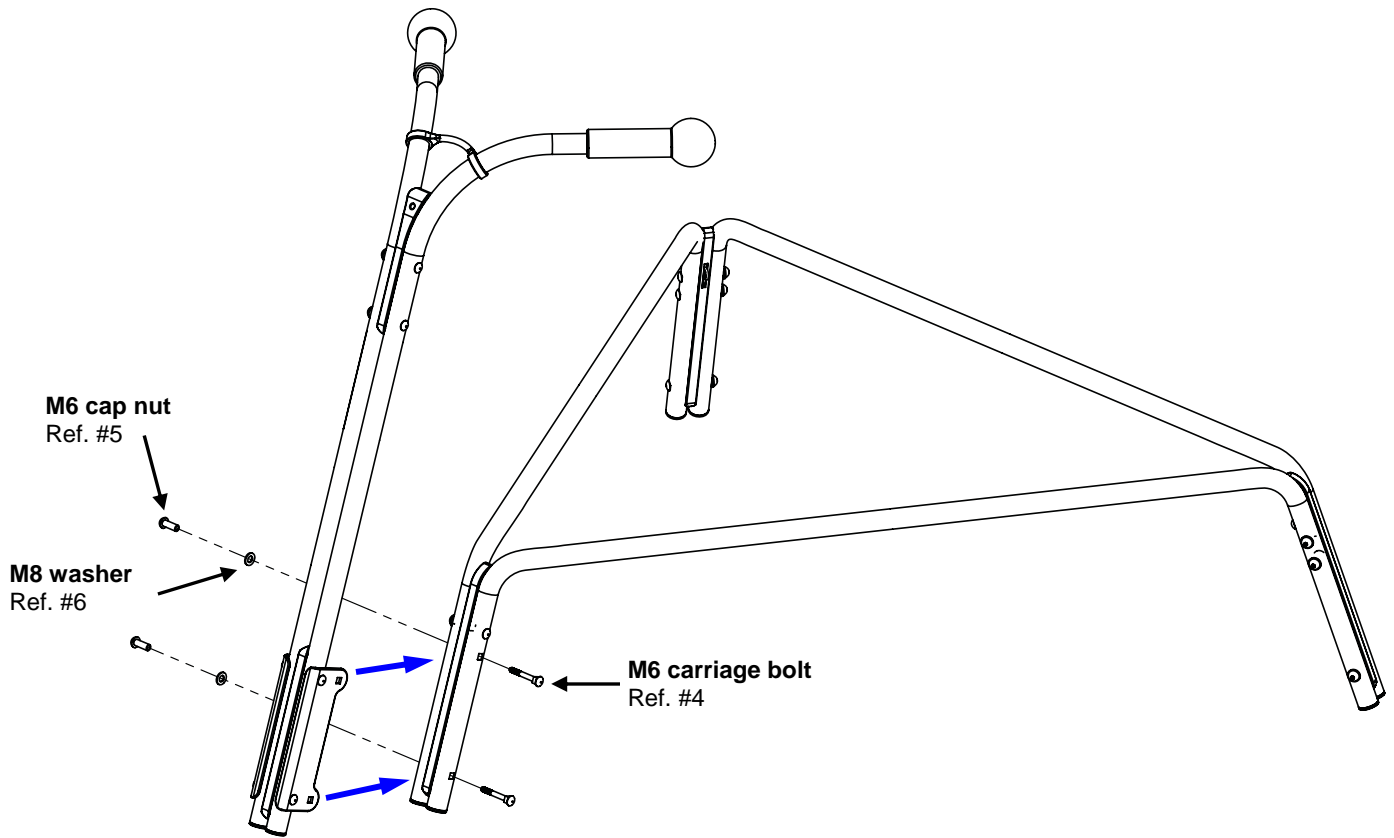


**3)** Secure handle assembly to frame, first positioning the assembly in place, then installing the 2 bolts as shown. **The handle assembly installs on the frame corner where you installed only the top bolt from Step 1.** M6 bolts should only be hand-tight. They will be securely tightened in a later step.

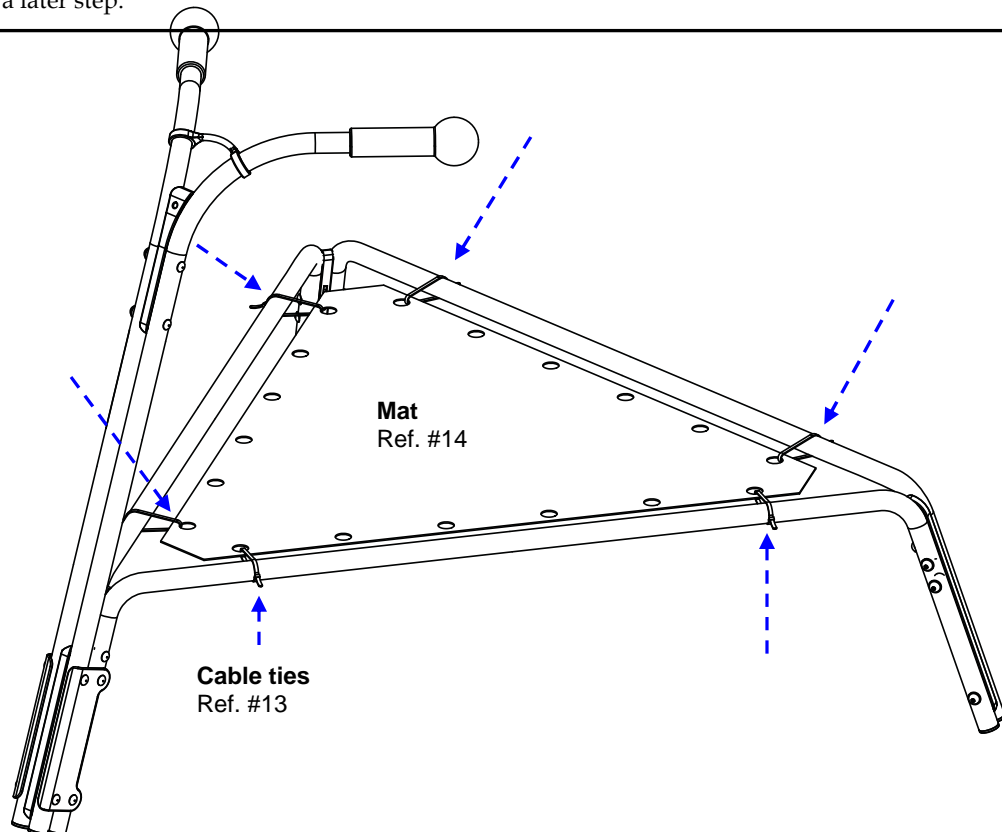


**4)** Position mat face up on ground, in center of trampoline. Top of mat edge will be smooth, and bottom edge will have a layer of material sewn to it. Temporarily secure the jumping mat to the frame with 6 cable ties (2 in each corner), as shown. **Make sure mat is pulled tight, and centered.**

## Assembly and Installation Instructions

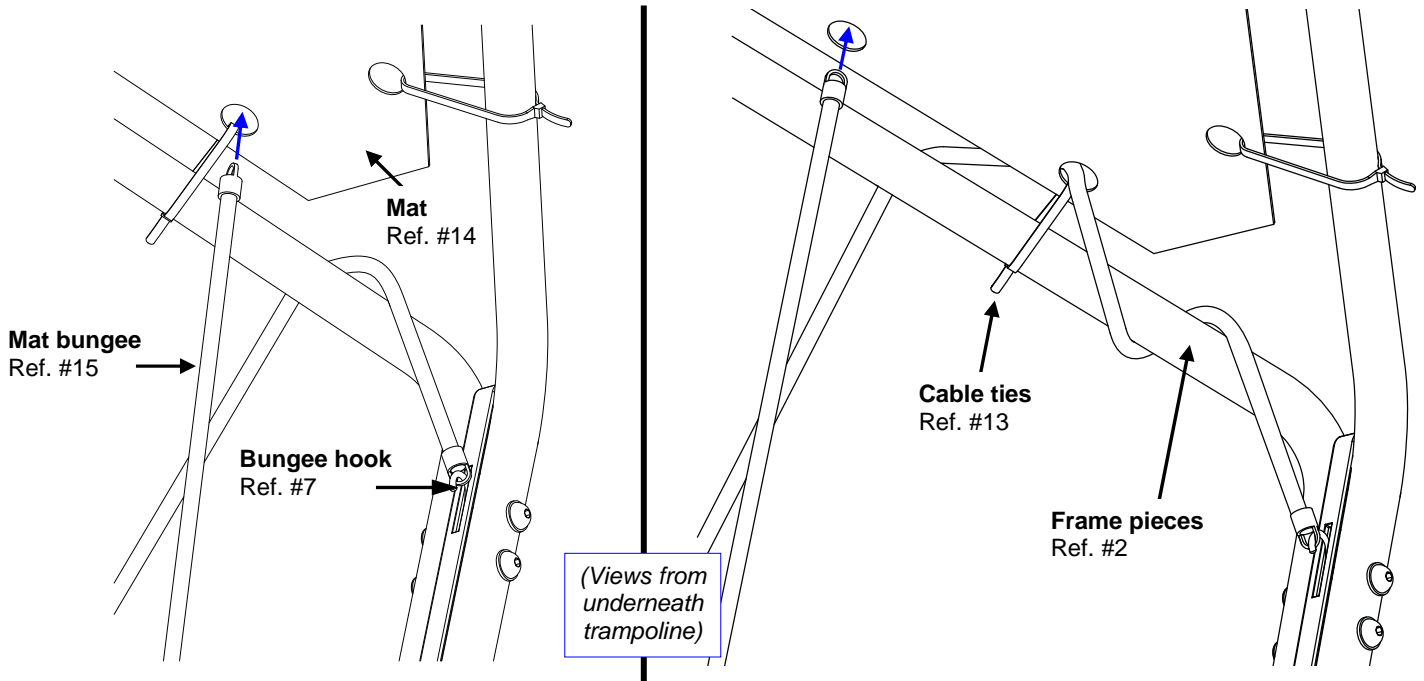

### 5) Install mat bungees:

- Connect the end of 1 mat bungee to the bungee hook.
- Lace bungee up and around frame as shown, and then up through hole in edge of mat. **Do NOT lace mat bungee directly to mat; bungee must FIRST lace once around frame, as shown, before passing up through the first hole in the mat.**
- Continue wrapping bungee once around frame and through each hole of mat until you get to the end of that one side of the frame. Pull bungee tight while lacing

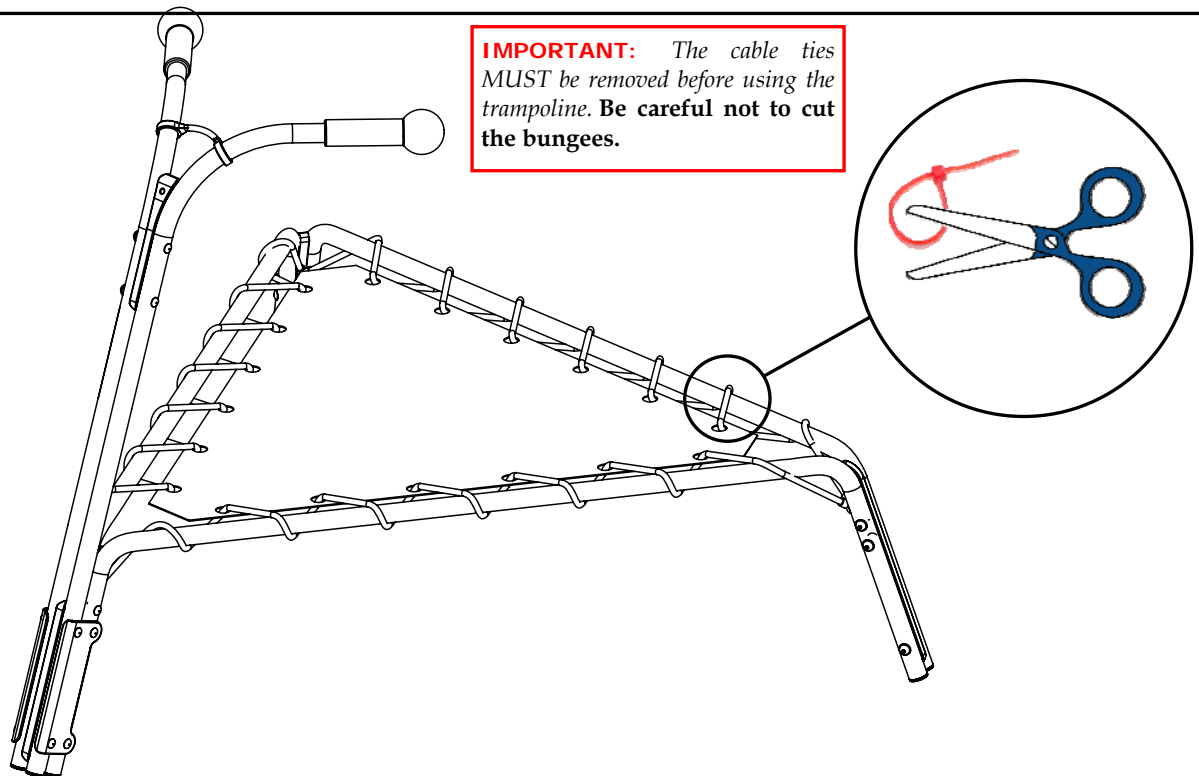


### 6) Repeat Step 5


bungees, securing the mat on all 3 sides.

with the other 2 mat

**IMPORTANT:** After securing the mat with all 3 bungees, carefully cut off all 6 cable ties that you used to position the mat in step 4. These *MUST* be removed before using the trampoline. **Be careful not to cut the bungees.** Then make sure the tension on each bungee is spread evenly across each frame piece to allow the mat to be centered and the bungees to wear evenly.

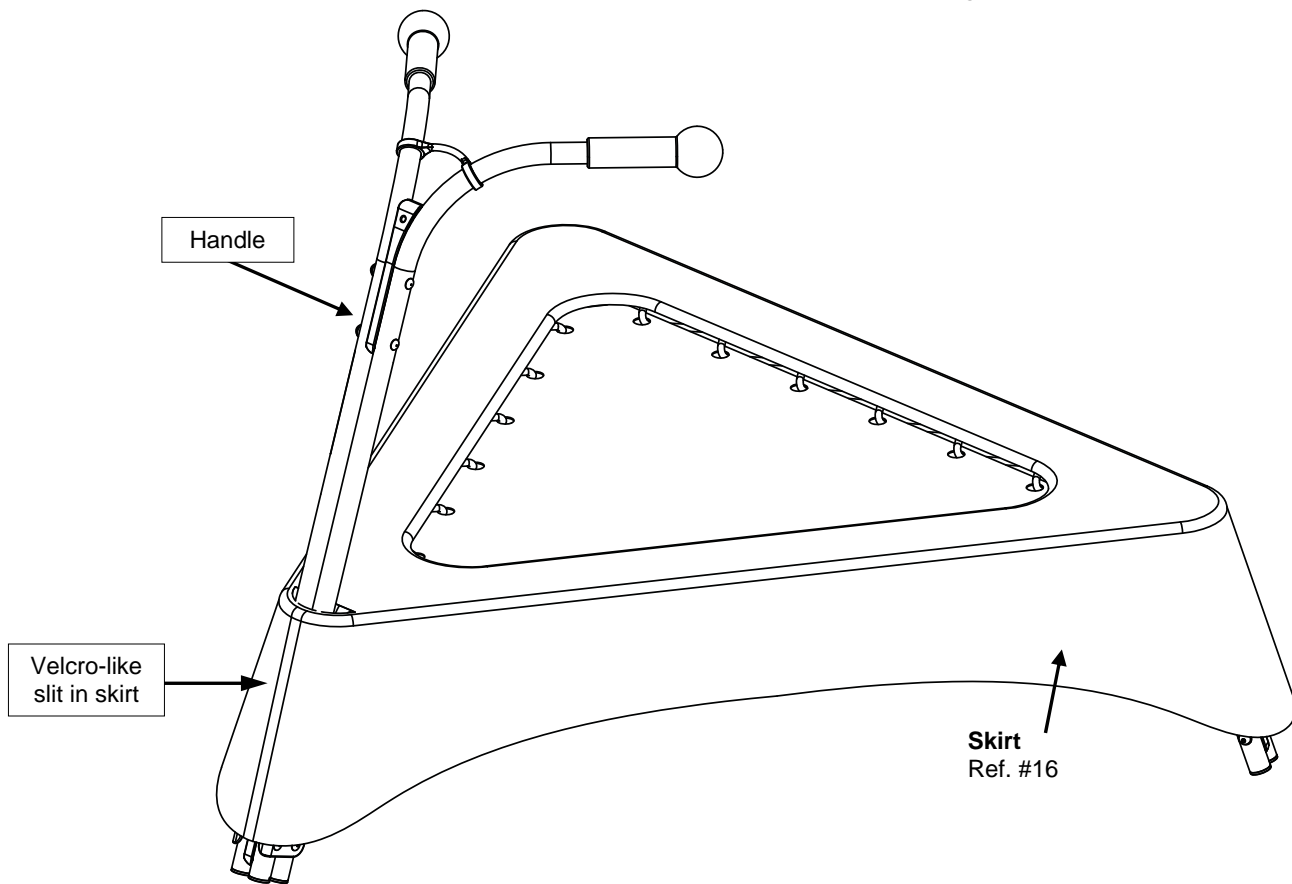

7) Open Velcro-like slit in skirt. Then wrap skirt around frame and close slit around the handle to secure the skirt in place.

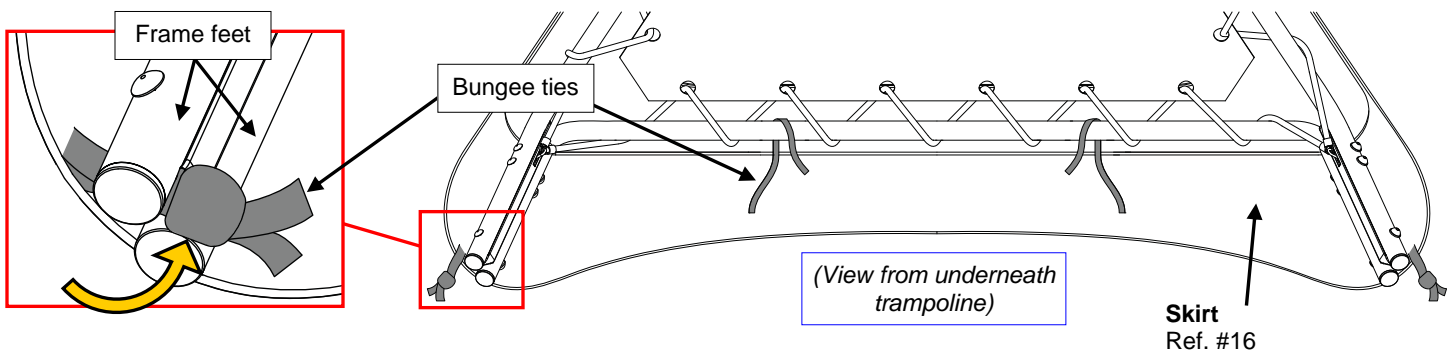

8) Lay trampoline on its side. Then on inside of skirt, secure bungee ties to the frame pieces:

- Position the bungees with knots so that the knot is secured in-between the bottom of each of the frame feet, as shown.
- Secure the skirt with 2 bungee ties, each about 1/3 of the way across each frame piece.
- Be sure to **loosely** tie each bungee so that the skirt has room to move while the trampoline is being used.
- Stand trampoline back upright.

### Removing the Handle Bar for Transportation or Storage

9) Reverse step 3 in the beginning of manual

- Please Note: DO NOT REMOVE THE UPPER BOLT THAT DOES NOT PASS THOROUGH THE HANDLE ATTACHMENT PLATES.

# JumpSport®

## 90 Day Limited Warranty

**What is covered by this warranty?** This warranty covers any defects in materials or workmanship on all of the components of the JumpSport iBounce Kids Trampoline, and is extended exclusively to the original retail purchaser.

**How long does this coverage last?** Warranty coverage for each component begins from the original date of purchase and lasts for 90 days.

**What will JumpSport do?** If you return the defective part to JumpSport, as instructed below, JumpSport will either repair or replace such part, at JumpSport's discretion, and return it to you.

**What is not covered by this warranty?** This warranty does not cover expenses of on-site labor, shipping costs, travel, assembly or disassembly, or other charges associated with the repair or replacement of covered components. This warranty also does not cover any problem that is caused by abuse, misuse, commercial or public use, ordinary wear and tear, outdoor use, weathering, acts of God (such as wind and lightning), failure to follow directions, improper installation, improper maintenance, or any silk screened graphics. Rust is a natural occurrence with any steel product and is likewise not covered by this warranty, to the extent that it does not affect the structural integrity of the part.

JUMPSPORT IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY LOSS, INCLUDING BUT NOT LIMITED TO ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUE OR PROFITS, LOSS OF ENJOYMENT OR USE, COST OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

**How to get a defective part replaced:**

- 1) Call the JumpSport Customer Service department at 1-888-567-5867 to obtain a Return Authorization number. All returns must be pre-authorized.
- 2) Send the part(s) to the designated Service Center, along with a copy of your original sales receipt and a brief written description of the problem, including how it occurred. You must pay freight and insurance to return the part to JumpSport. At JumpSport's sole discretion, we may ask you to send photographs in addition to or in lieu of returning the part.
- 3) After inspecting the returned part(s), JumpSport will make a final determination whether the part is covered by this warranty. We reserve the right to examine photographs or physical evidence concerning parts claimed to be defective prior to making a final determination concerning the claim. A repaired or replacement part will be returned to you. Please allow 3 to 4 weeks for delivery.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.