

User's Manual - Fitness Trampoline Model 430-III

Assembly, Installation, Care, Maintenance, and Use Instructions.

Read these materials prior to assembling and using this trampoline



DO NOT attempt or allow somersaults. Landing on the head or neck can cause serious injury, paralysis or death, even when landing in the middle of the bed.



WARNING

Read these materials prior to assembling and using this rebounder trampoline

Use trampoline only with mature, knowledgeable supervision.

DO NOT allow more than one person on the trampoline. Use by more than one person at the same time can result in serious injury.



WARNING

1. DO NOT attempt or allow somersaults. Landing on the head or neck can cause serious injury, paralysis, or death even when landing in the middle of the bed.
2. Do not allow more than one person on the trampoline.
3. Use trampoline only with mature knowledgeable supervision.
4. Exercise can present a health risk. Consult a physician before beginning any exercise program with this equipment.
5. If you feel faint or dizzy, immediately discontinue use of this equipment.
6. Keep others and pets away from equipment when in use.
7. Always make sure all parts are securely tightened prior to each use.
8. This trampoline is not recommended for children.
9. This product is intended for indoor use only.



WARNING

Serious bodily injury or death can occur if the above warnings are not followed or if this equipment is not assembled and used according to all instructions.



This Product is Distributed Exclusively by

JumpSport **FITNESS**

Model 430-III P/N: RBJ-S-21823-00

Max Weight Allowed:

275lb (125kg)

Designed for indoor use only.

JumpSport, Inc.
1680 Dell Ave.
Campbell, CA 95008 U.S.A.

1.408.213.2551
www.JumpSportFitness.com

Patent info at: www.jumpsport.com/patents
Instruction Manual P/N: INS-P-21593-00D

Copyright © 2020, by JumpSport, Inc. All rights reserved.

Safety Instructions



Consult your physician before starting this or any exercise program. This is especially important if you are over the age of 35, have never exercised before, are pregnant, or suffer from any health problem. To reduce the risk of serious injury, read the following Safety Instructions before using the JumpSport Fitness Trampoline.



1. Misuse and abuse of this trampoline is dangerous and can cause serious injuries.
2. Trampolines, being rebounding devices, propel the performer to unaccustomed heights and into a variety of body movements.
3. Unless designated, the JumpSport Trampoline is for home use only. Do not use in institutional or commercial applications. Failure to follow this warning could result in minor or moderate injury.
4. All purchasers and all persons using the JumpSport Fitness Trampoline must become familiar with the manufacturer's recommendations for proper assembly, use and care of the JumpSport Fitness Trampoline, as well as being alert to the performer's own limitations in the execution of trampoline skills. Assembly Instructions, Safety Instructions, Trampoline Fundamentals, and Warning Labels are included to promote safe, enjoyable use of the JumpSport Fitness Trampoline. Make sure that it is properly assembled and tightened before use.
5. The owner and supervisors of the trampoline are responsible to make all users aware of the Safety Instructions and practices in the use instructions.
6. Place the JumpSport Fitness Trampoline on a level surface before use.
7. Use the JumpSport Fitness Trampoline in a well lighted area. THIS PRODUCT IS INTENDED FOR INDOOR USE ONLY.
8. Do not place the JumpSport Fitness Trampoline on an elevated surface. The JumpSport Fitness Trampoline should be at floor level or ground level.
9. Inspect your JumpSport Fitness Trampoline before each use.
10. Make sure the floor or ground around the JumpSport Fitness Trampoline is clear of all objects that may cause injury if you step on them when dismounting.
11. Do not allow children to use the JumpSport Fitness Trampoline. The JumpSport Fitness Trampoline is not a toy, it is for use by adults only. Use the trampoline only with mature knowledgeable supervision.
12. Keep small children and pets away from the JumpSport Fitness Trampoline at all times including use and assembly of the JumpSport Fitness Trampoline.
13. Do not use the JumpSport Fitness Trampoline with socks only. Good traction is very important when mounting, using, and dismounting the JumpSport Fitness Trampoline. Bare feet are acceptable but we recommend good footwear with rubber non-skid soles such as walking, running or cross-training shoes.
14. Wear appropriate clothing when exercising; do not wear loose clothing that could become caught in the JumpSport Fitness Trampoline.
15. The JumpSport Fitness Trampoline should be used by only one person at a time.
16. Remove any obstructions from beneath the JumpSport Fitness Trampoline.
17. The surface of the bed should be dry.
18. Be careful to maintain your balance when mounting, using, dismounting, or assembling the JumpSport Fitness Trampoline. Loss of balance may result in a fall and serious bodily injury.
19. Do not attempt any gymnastic or acrobatic maneuvers on the JumpSport Fitness Trampoline.
20. Stop exercising before attempting to dismount the JumpSport Fitness Trampoline. To avoid sprains and broken bones, come to a complete stop before dismounting.
21. Use the JumpSport Fitness Trampoline only as described in this manual.
22. Always store the JumpSport Fitness Trampoline indoors in a dry place.
23. Secure the JumpSport Fitness Trampoline against unauthorized and unsupervised use.

Assembly Instructions



Place all parts from the box in a clear/clean area and position them on the floor in front of you. Remove all packing materials from your area and place them back into the box. Do not dispose of the packing materials until assembly is completed.

Although JumpSport constructs its products with the finest materials and uses the highest standards of manufacturing and quality control, there can sometimes be missing parts or incorrectly sized parts. If you have any questions or problems with the parts included with your JumpSport Fitness Trampoline, please do not return the product. Contact us FIRST!

If a part is missing or defective, please go to www.JumpSportFitness.com and order the part needed, or call us toll free at 1-888-567-5867 (in the US) or 1-408-213-2551.

Step 1: Assemble the frame pieces so that the 6 leg bases rest on the floor.

Step 2: Lay the mat with preinstalled bungees out in the middle of the frame with the logo facing up. Orient the logo so that it is centered over a leg base, and lay the frame on top.

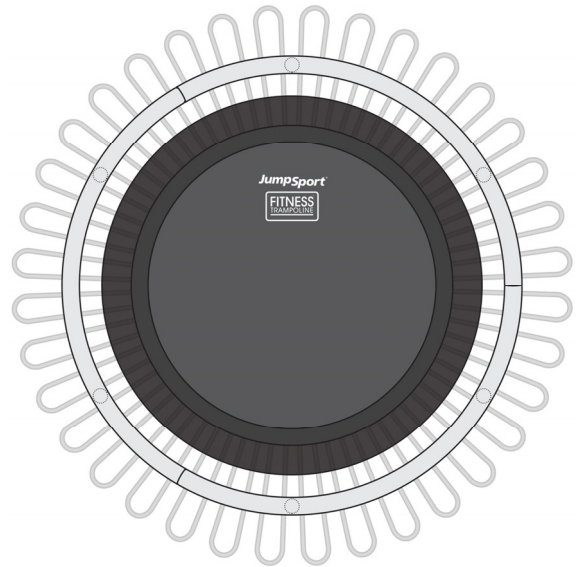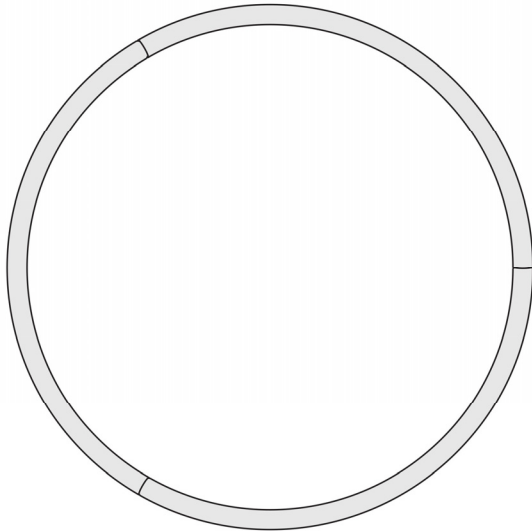



Step 3: Refer to images on next page for steps 3-6 The frame will have 6 bungees between each leg when all bungees are connected, but initially only the bungees on each side of a leg base will be installed. To start, identify the two bungee connectors just to the left and right of the center of the logo, and install one on either side of a leg base. To install a bungee: with the bungee loop on the underside of frame, pull the loop around the top of the frame, and install the bungee loop securely into the bungee connector saddle, as shown in the top and side view images on the following page. Repeat this process at each of the leg bases, following the numeric order shown in the picture on the next page until 12 bungees are installed.

Step 4: Install a bungee in approximately the middle of each section, so the mat is evenly distributed.


Step 5: Install every other bungee around the frame, until all the bungees are installed.

Step 6: Make sure the bungees are fully seated into the connector saddles and that the bungee cord on each side of the saddle is equally tensioned, then flip trampoline upside down, so that the leg bases are facing upward.

Assembly Instructions

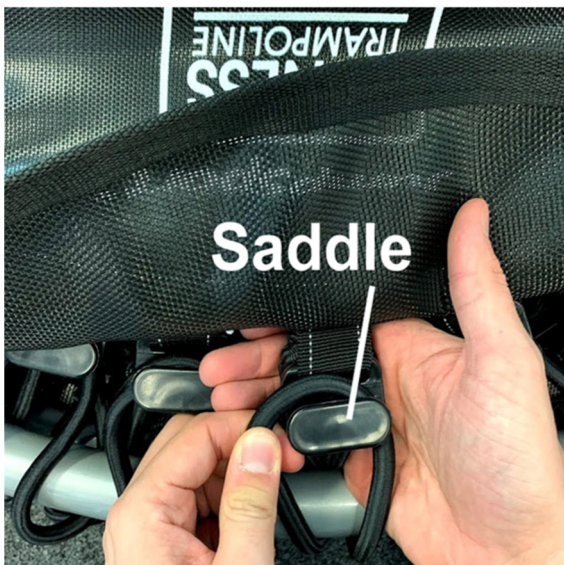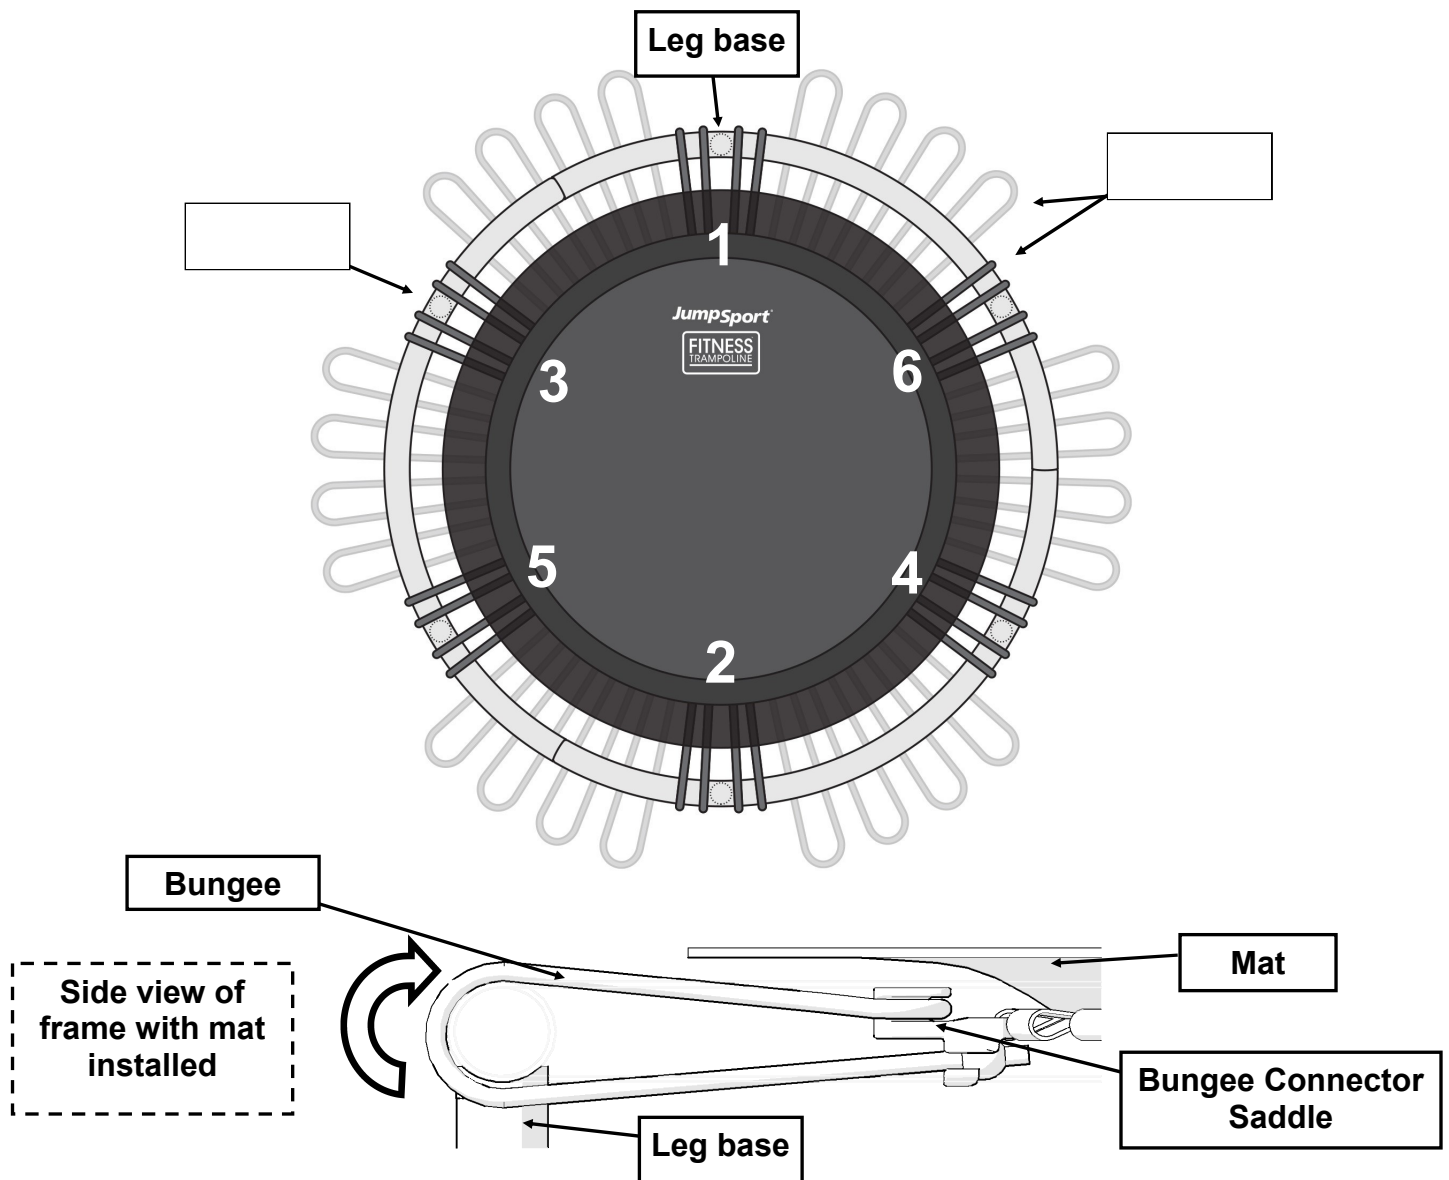

Assembly Instructions

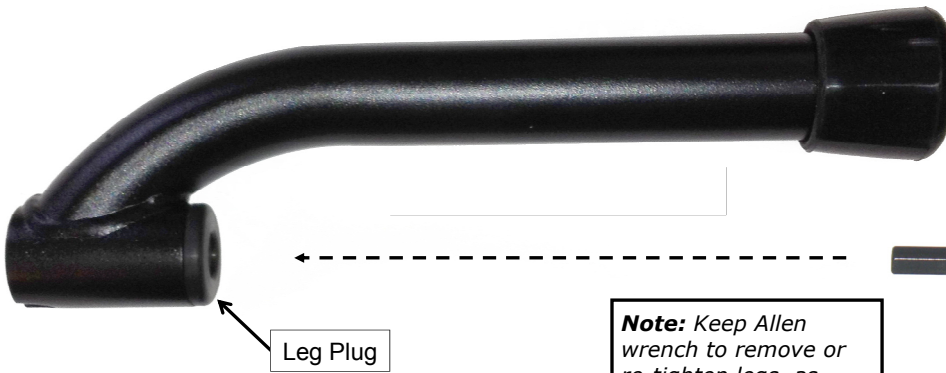


Leg Plug

Note: Keep Allen wrench to remove or re-tighten legs, as needed.

IMPORTANT: The leg plugs cover pre-installed hardware. Please **DO NOT** remove them unless instructed to do so for replacement purposes.



Pin on Stud

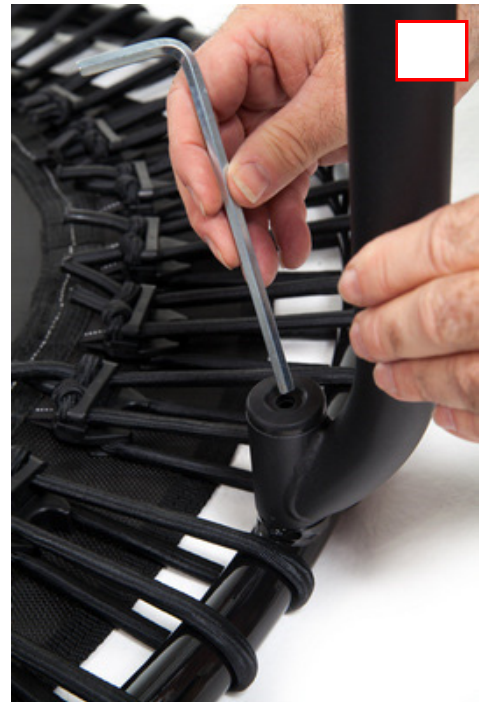

WARNING: Periodically check all leg mounting bolts and retighten if necessary. All bolts should be tight prior to using the rebounder trampoline.

Note: If you are going to install an exercise handle, refer to the instructions before installation.

Step 7: With trampoline upside-down, fit leg sockets over stud on trampoline frame. Notch in socket lines up with pin on stud. [Photo 1]

Insert the end of the supplied 6mm Allen wrench into the hole in the rubber leg plug and engage the Allen bolt head inside the leg. [Photo 2]

Securely tighten Allen bolts with 6mm Allen wrench.

The JumpSport Fitness Trampoline is now ready for use!

IMPORTANT: Bolts may offer resistance when tightening. No threads of the bolt should be exposed when bolt is properly installed. Use leverage with the provided 6mm Allen wrench or use a power drill to ensure safe and proper installation.

A Note About Expected Cord Life

Elastic cords are wear items that need to be replaced from time to time. Their life expectancy is determined by:

- The way the trampoline is being used (jumping for height vs. controlled, fitness-style bouncing vs. jogging)
- The user weight and height
- Frequency of bouncing
- The type of cords used (standard or extra-firm)

We are often asked how long your cords will last. The answer is, it depends. Some of our customers use a set for 9 months, while most will use a set for many years. Similar to running shoes or car tires, the more you use them and the *harder* you use them, the faster they need to be replaced.

Care, Maintenance and Storage

Stacking: Use 2 people when stacking or unstacking units. Stack 8 units max, with feet down.



Inspect the **JumpSport Fitness Trampoline** before each use and replace any worn, defective, or missing parts. The following conditions could represent potential hazards:

1. Punctures, frays, tears, or holes in the bed or elastic bands.
2. Deterioration in the stitching or fabric of the bed.
3. Ruptured or damaged elastic bands.
4. A bent or broken frame.
5. A sagging bed.
6. Sharp protrusions on the frame or suspension system.


Making Replacements and Adjustments

Replacing Endurolast Cords

Replace your elastic cords with genuine JumpSport® parts whenever there is visible damage or when the cords feel too soft.

- 1) Remove existing cord. Take the new cord and first secure each knot into the respective openings, as shown at location 1 in the diagram, below.
- 2) Pull the loop end out and over the frame, and install securely into the saddle, shown at location 2 in the diagram, below.
- 3) Be sure the end of the cord loop is centered in the U-shaped slot so the cord tension is equal on both sides of the mat connector.


TIP: If you have an adjustable FlexBounce system (see photo and diagram below) and the cords are not visibly damaged, try a firmer tension setting to improve performance and extend the life of your cords.

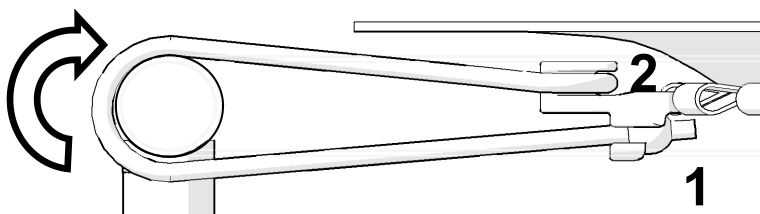

How to Adjust FlexBounce™ Cords

(300 and 500 Series)

If you wish to change the firmness of your rebounder, turn it upside down. Pull cord tighter to different knot, according to chart.

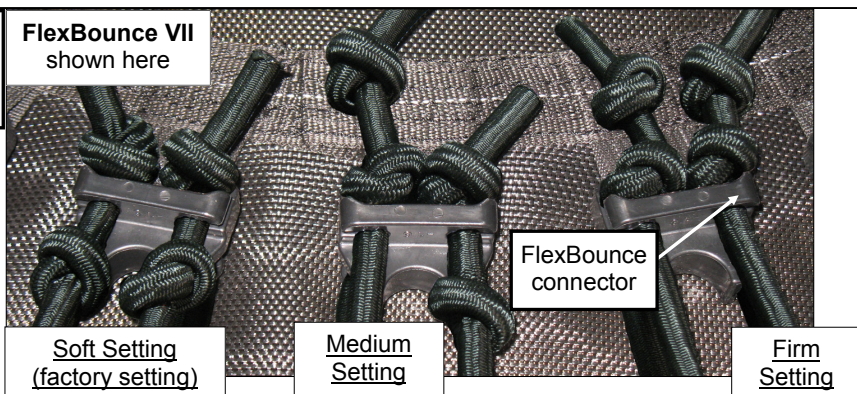

Expected Cord Life

Elastic cords are wear items that need to be replaced from time to time. Their life expectancy is determined by:

- The way the trampoline is being used (jumping for height vs. controlled, fitness-style bouncing vs. jogging)
- The user weight and height
- Frequency of bouncing
- The type of cords used (standard or extra-firm)

We are often asked how long your cords will last. The answer is, it depends. Some of our customers use a set for 9 months, while most will use a set for many years. Similar to running shoes or car tires, the more you use them and the harder you use them, the faster they need to be replaced.

		FlexBounce III Configurations	FlexBounce VII Configurations
Softer	Soft Setting on all FlexBounce connectors	Soft Setting on all FlexBounce connectors	Soft Setting on all FlexBounce connectors
	Medium Setting on every other connector	Medium Setting on every other connector	Medium Setting on every other connector
			Soft / Medium / Medium Settings (repeat pattern)
	Medium Setting on every connector	Medium Setting on every connector	Medium Setting on every connector
Firmer			Firm Setting on every other connector
			Medium / Firm / Firm Settings (repeat pattern)
			Firm Setting on every connector



Limited Warranty

What is covered by this warranty? This warranty covers any defects in materials or workmanship on all of the components of a new JumpSport Fitness Trampoline system, and is extended exclusively to the original retail purchaser.

How long does this coverage last? Warranty coverage for each component of a new JumpSport® Fitness Trampoline begins from the original date of purchase and lasts as follows

	Private Use	Commercial Use (Series 300/500 Only)
Steel Frame & Legs	Lifetime	5 years
Series 200 & 400 Jumping Surface and EnduroLast Cords*	2 years*	n/a
Series 300 Jumping Surface and EnduroLast Cords*	3 years*	12 months* (Except the 370)
Series 300 PRO Jumping Surface and EnduroLast Cords*	4 years*	18 months* (Plus the 370) / 1 year on Jumping Surface
Series 500 PRO Jumping Surface and EnduroLast Cords*	5 years*	18 months* / 1 year on Jumping Surface
All other components (including hinges)	1 year	1 year

***Mat and cord warranty are limited to only one (1) usage replacement during applicable period.**

What will JumpSport do? If you return the defective part to JumpSport, as instructed below, JumpSport will either repair or replace such part, at JumpSport's discretion, and return it to you.

What is not covered by this warranty? This warranty covers new products purchased as a complete system; it does not cover replacement parts. This warranty also does not cover expenses of on-site labor, shipping costs, travel, assembly or disassembly, or other charges associated with the repair or replacement of covered components. Further, this warranty does not cover any problem that is caused by abuse, misuse, commercial or public use of 200 & 400 Series models, ordinary wear and tear, outdoor use, weathering, acts of God (such as wind and lightning), failure to follow directions, improper installation, improper maintenance, or any silk screened graphics. Rust is a natural occurrence with any steel product and is likewise not covered by this warranty, to the extent that it does not affect the structural integrity of the part.

JUMPSPORT IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY LOSS, INCLUDING BUT NOT LIMITED TO ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUE OR PROFITS, LOSS OF ENJOYMENT OR USE, COST OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

How to get a defective part replaced:

- 1) Call the JumpSport Customer Service department at 1-877-507-1399 to obtain a Return Authorization number. All returns must be pre-authorized.
- 2) Send the part(s) to the designated Service Center, along with a copy of your original sales receipt and a brief written description of the problem, including how it occurred. You must pay freight and insurance to return the part to JumpSport. At JumpSport's sole discretion, we may ask you to send photographs in addition to or in lieu of returning the part.
- 3) After inspecting the returned part(s), JumpSport will make a final determination whether the part is covered by this warranty. We reserve the right to examine photographs or physical evidence concerning parts claimed to be defective prior to making a final determination concerning the claim. A repaired or replacement part will be returned to you. (Shipping charges may apply.) Please allow 3 to 4 weeks for delivery."

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

***Only the models in our 300 and 500 Series of Fitness Trampolines are approved for commercial use. When used in a commercial setting, the commercial warranty applies.**

